

AGES 4+  
70028 Asst.



## **Kneading Kitten**

### INSTRUCTION MANUAL










Thank you for purchasing this FURREAL FRIENDS toy! For maximum play value, please read and follow these instructions carefully.

 **x3**  
1.5VAAA or LR03 size

 
### **BATTERIES INCLUDED**

Replace with 1.5V "AAA" or LR03 size alkaline batteries.  
Phillips/cross head screwdriver (not included) required for battery replacement.



## GETTING STARTED

To activate your toy, slide the TRY-ME/OFF/ON switch to the "ON" position. Your toy is now ready to play!

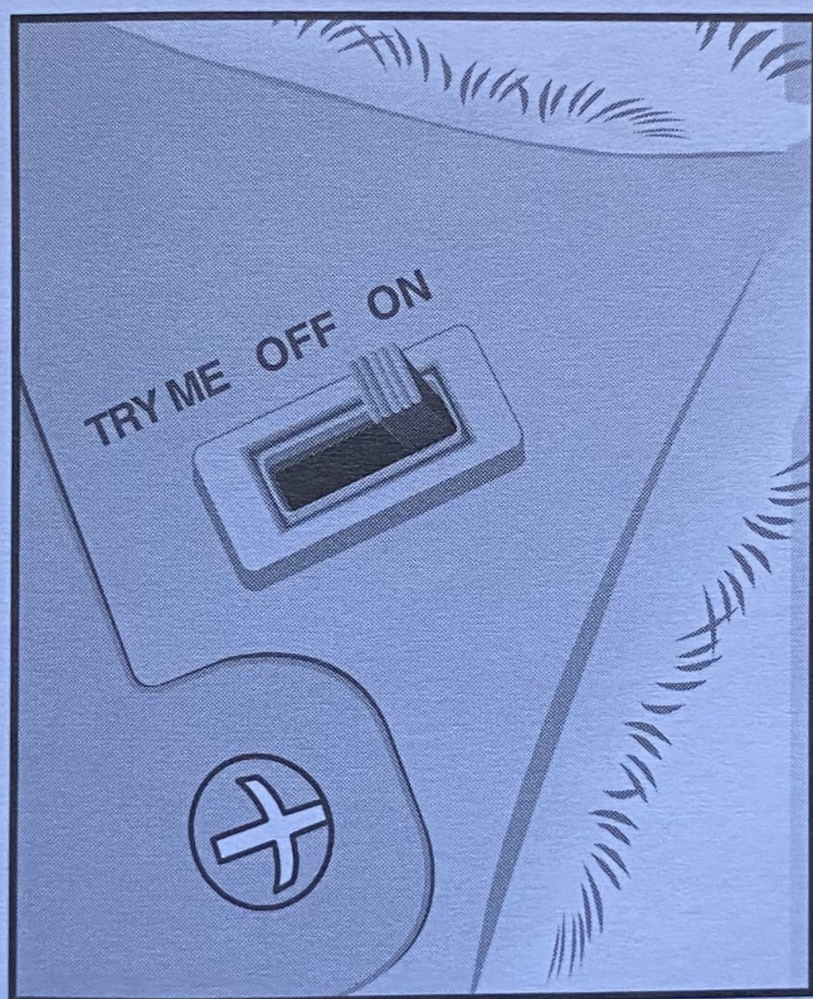




Place your finger  
here lightly to feel  
the kitten "purring".

### **Back Sensor**

 When you pet  
your toy on its  
back (in the area  
shown), it will  
knead its paws  
and make kitten  
sounds.

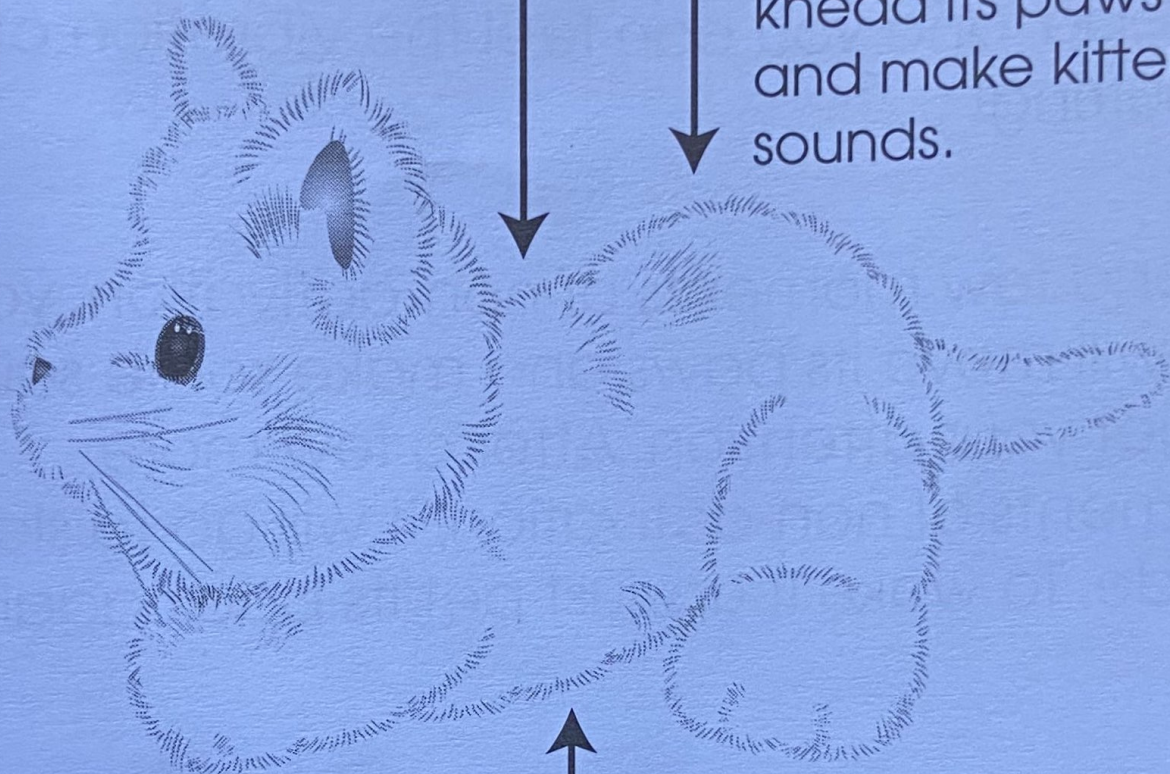

**Battery door  
&  
TRY-ME/OFF/ON  
switch**

A sensor is a  
part of the toy  
that responds  
to your touch!



## PLAYING WITH YOUR TOY

 
Your toy responds to your touch by kneading its paws and making lots of kitten sounds. The more you pet your toy, the happier it will be!

Place your hand on the toy's back, behind its head, and you can feel the vibration of its purring!

After a few moments of non-activation, your toy will move its paws and make some sounds to get your attention. After a few more moments of non-activation, it will go to sleep mode. To wake it up, just pet its back again.




Note: The toy uses battery power whenever its switch is in the "ON" position. When you're not playing with the toy, move its switch to the "OFF" position: this will help conserve battery life.

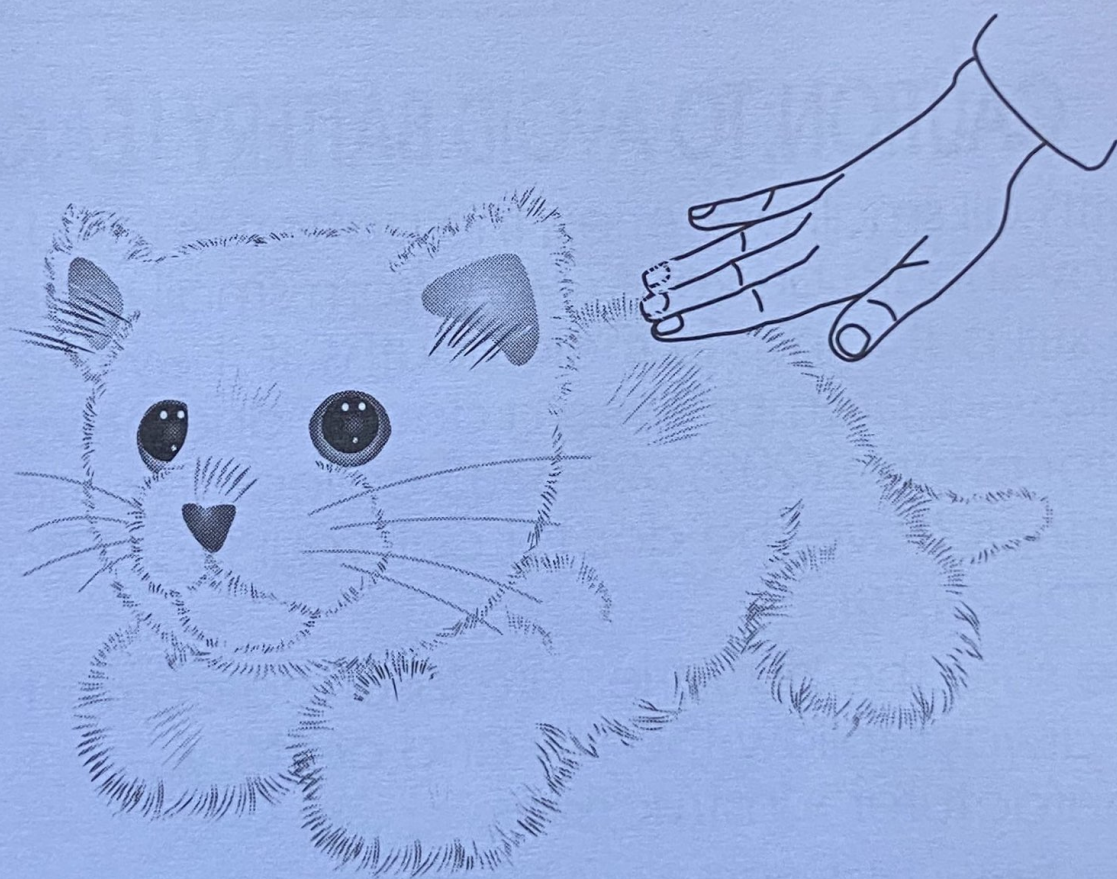



## TO REPLACE BATTERIES

 Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries (not included). Replace door and tighten screw.

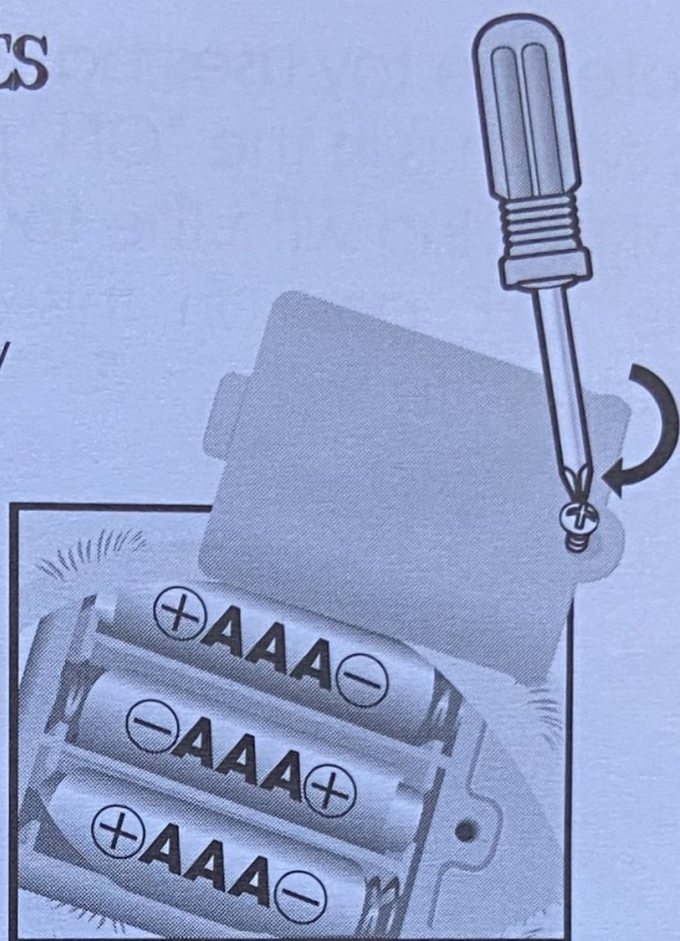

## CAUTION: TO AVOID BATTERY LEAKAGE

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. In other countries, have the doctor call your local poison control center.
2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
3. Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



# IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.



## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.



## CLEANING INSTRUCTIONS

To clean toy, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.



## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.





**TIGER**  
ELECTRONICS®

Product and colors may vary.

© 2007 Hasbro, Pawtucket, RI 02862 USA.

All Rights Reserved. TM & ® denote U.S. Trademarks.

U.S. Pat. Nos. 6843703, 6811461 and patent pending.

P/N 6717610000

Register your pet's name at:  
[www.furrealfriends.com](http://www.furrealfriends.com)

Questions? Call 1-800-844-3733